


**F21** Load bearing cantilevers

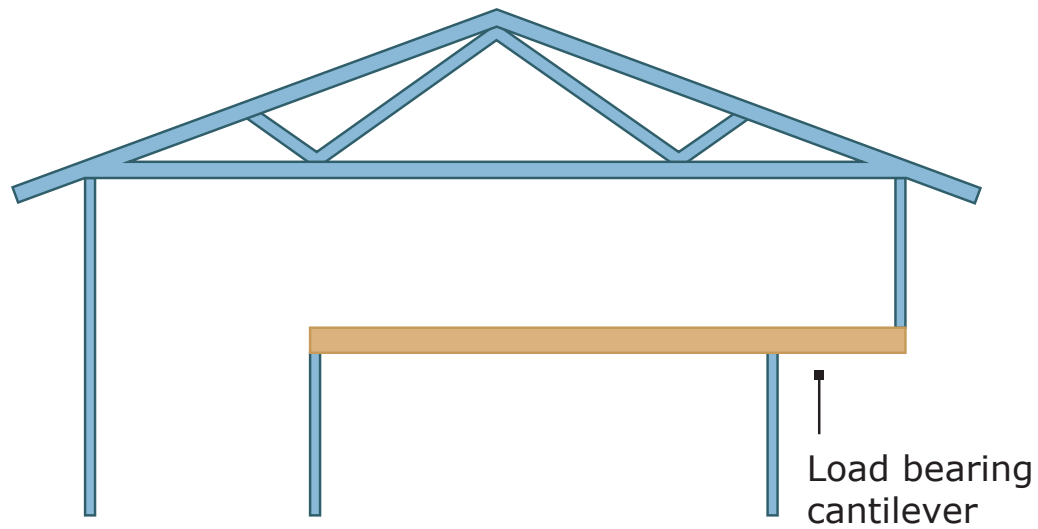

LIB's may be used in cantilever applications supporting a concentrated load applied to the end of cantilever such as vertical building offset. Use Nelson Pine to determine cantilever under each load condition